
THE SWING

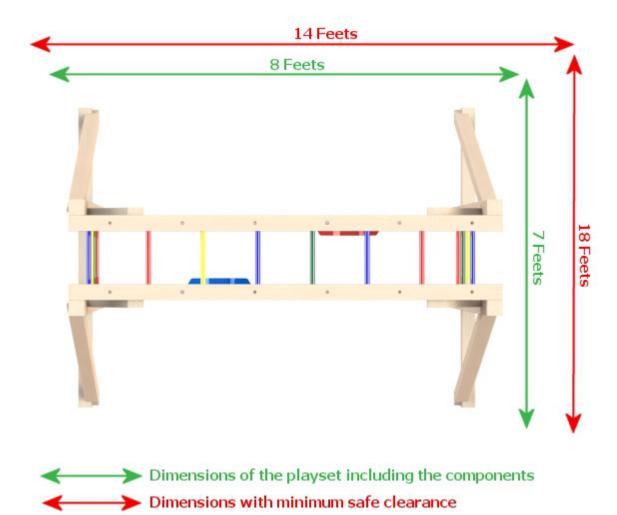

The total height of the swing set is 8 feet.

- Do not install the playset closer than 8 feet from a pool.
- Pay attention particularly to electric wires and clotheslines. They must not be attainable from the top of the playset with or without objects.
- Install the playset on a relatively levelled and even surface.
- For commercial use, the safe clearance zones are larger and higher than those indicated in the present document.
- The playing surface must be made of thick lawn or covered with at least 8 inches of wood chips, sand for playing grounds or river pebbles.
- For commercial use, the surface must be covered with at least 12 inches of wood chips, sand for playing grounds or river pebbles.